



HEXAGON



APN-076

# Application Note

## SPAN Data Logging for Inertial Explorer



## HEXAGON AUTONOMY & POSITIONING DIVISION PROPRIETARY DATA

This document and the information contained herein are the exclusive properties of Antcom Corporation, Autonomous Stuff LLC, NovAtel Inc., Veripos Limited, and/or their affiliates within the Hexagon Autonomy & Positioning division ("Hexagon").

No part of this document may be reproduced, displayed, distributed, or used in any medium, in connection with any other materials, or for any purpose without prior written permission from Hexagon. Applications for permission may be directed to [contact.ap@hexagon.com](mailto:contact.ap@hexagon.com). Unauthorised reproduction, display, distribution or use may result in civil as well as criminal sanctions under the applicable laws. Hexagon aggressively protects and enforces its intellectual property rights to the fullest extent allowed by law.

This document and the information contained herein are provided AS IS and without any representation or warranty of any kind. Hexagon disclaims all warranties, express or implied, including but not limited to any warranties of merchantability, non-infringement, and fitness for a particular purpose. Nothing herein constitutes a binding obligation on Hexagon.

The information contained herein is subject to change without notice.

Hexagon, ALIGN, Inertial Explorer, NovAtel, OEM6, OEM7, and SPAN are trademarks of Hexagon AB and/or its subsidiaries and affiliates, and/or their licensors. All other trademarks are properties of their respective owners.

© Copyright 2017– 2024 Hexagon AB and/or its subsidiaries and affiliates. All rights reserved. A list of entities within the Hexagon Autonomy & Positioning division is available at: <https://hexagon.com/company/divisions/autonomy-and-positioning>.

## Contents

Overview .....	4
Data Logging.....	4
Log Types and Headers .....	4
Logging Triggers and Frequency .....	4
SPAN Logs .....	5
Required Logs .....	5
Recommended Logs .....	6
Supplementary Logs: Common Applications .....	8
Dual Antenna (ALIGN Solution).....	9
Wheel Sensor (Distance Measurement Instrument – DMI) .....	10
Miscellaneous .....	11
Appendix A: Full Project Example.....	11
Logs and Commands .....	11
Data Conversion.....	12
Data Files .....	13
Auto-fill Set Up Parameters .....	14
Additional Resources .....	15
OEM User Manuals .....	15
Waypoint Product Manuals .....	15
Support .....	16
Documentation .....	16

## Overview

This document provides an overview of the OEM6 and OEM7 SPAN logs used for post-processing in Inertial Explorer. A list of required logs outlines the minimum logging requirements needed for post-processing. Additional logs are recommended for increased ease of use, specific applications, and troubleshooting purposes. Example lists of commands and logs are provided at the end of the document, which can be used as templates for basic data collections.

## Data Logging

### Log Types and Headers

There are multiple logging formats which can be used to record NovAtel receiver data. [Table 1](#) provides a summary of these formats and select examples. It is recommended to log data records in binary format, as the NovAtel/OEM decoder in Inertial Explorer supports only binary logs. After data conversion, all decoded logs will be displayed in the conversion summary. Further details on data types and log formats can be found in the OEM User Manuals.

Table 1: Logging different formatting types

	Log Type	Symbol	Example Log
Data Type	ASCII	-	INSPVA
	Binary B	B	INSPVAB
Log Format	Short Header	S	INSPVAS
	Extended	X	INSPVAX
	Compressed	CMP	RANGECMP
Example: RAWIMUSXB Extended version [X] of a Binary Log [B] with a Short header [S]			

### Logging Triggers and Frequency

The choice of logging triggers depends on the log itself, and how the data is used in post-processing. Each log trigger outputs the current message immediately after it has been called.

- **ONCE**: Outputs the current message only once.
- **ONCHANGED**: The log is output only when the values in the message change.
- **ONNEW**: The log will be output every time the log is updated. This ensures that internally triggered logs are also output.
- **ONTIME <#>**: The log will continually be requested and output every <#> seconds during data collection.

The choice between ONNEW and ONCHANGED is dependent on the type of data collection and user preferences. The ONNEW trigger can result in larger files with duplicate logs that are ignored by Inertial Explorer's converter. The ONCHANGED trigger is preferable to avoid duplicates and minimize file size. However, if the ONCHANGED log request is made before the logging file is opened the log will not be triggered until a value has changed. This may cause issues in short surveys, as slow changing logs (such as RAWEPHEMB) may not be logged during the data collection period. For this reason, ONNEW is suggested for short surveys.

If using ONCE, the user must ensure that the logging file has been opened before the log call. If not, the information will not be saved anywhere in the file, as the log will not be called again. While in INS operation, the highest rate that GNSS logs should be requested is 5 Hz (0.2 seconds). GNSS logs include, but are not limited to, [RANGECMPB](#), [BESTPOSB](#), [BESTGNSSPOSB](#), [RTKPOSB](#) and [PSRPOSB](#).

The recommended rate for all GNSS logs is 1 Hz for GNSS and INS Integration.

## SPAN Logs

The following list outlines the logs required and recommended for post processing in Inertial Explorer. For differential processing, a subset of these logs must be logged at the base. The **Required for** note describes how Inertial Explorer uses the data provided in the log. Suitable **Alternative logs** are also listed, which can be selected based on user preference. The **Used for** note describes how Inertial Explorer uses the data provided in the log. Not all logs will be used in Inertial Explorer post-processing, however they can be **Helpful for** troubleshooting purposes and record keeping. Finally, **Requirement** notes outline prerequisite steps needed for the successful output of the log.

### Required Logs

These logs are required to collect the raw data necessary for post-processing.

Table 2: Required logs

Log	Platform	Receiver Type	Details
LOG RANGECMPB ONTIME 1	OEM6/OEM7	Rover/Master	<ul style="list-style-type: none"> <li>Satellite range information. Channel measurements for the currently tracked satellites.</li> <li><b>Required for:</b> GPB file creation and GNSS data processing; source of GNSS raw data.</li> <li><b>Alternatives:</b> RANGEB, RANGECMP2B, RANGECMP4B</li> </ul>
LOG GPSEPHEMB ONNEW	OEM6/OEM7	Rover/Master	<ul style="list-style-type: none"> <li>GPS raw ephemeris information.</li> <li><b>Required for:</b> Computing GPS satellite coordinates and elevation.</li> <li><b>Alternative:</b> RAWEPHEMB</li> </ul>
LOG GLOEPHEMERISB ONNEW	OEM6/OEM7	Rover/Master	<ul style="list-style-type: none"> <li>GLONASS raw ephemeris information.</li> <li><b>Required for:</b> Computing GLONASS satellite coordinates and elevation.</li> <li><b>Alternative:</b> GLORAWEPHEMERISB</li> </ul>
LOG GALINAVEPHEMERISB ONNEW	OEM6/OEM7	Rover/Master	<ul style="list-style-type: none"> <li>Galileo INAV ephemeris information.</li> <li><b>Alternative:</b> GALEPHEMERISB</li> </ul>

LOG GALFNAVEPHEMERISB ONNEW	OEM6/OEM7	Rover/Master	<ul style="list-style-type: none"> <li>Galileo FNAV ephemeris information.</li> <li><b>Alternative:</b> GALEPHEMERISB</li> </ul>
LOG BDSEPEMERISB ONNEW	OEM6/OEM7	Rover/Master	<ul style="list-style-type: none"> <li>BeiDou ephemeris information.</li> </ul>
LOG QZSSEPEMERISB ONNEW	OEM6/OEM7	Rover/Master	<ul style="list-style-type: none"> <li>QZSS ephemeris parameters.</li> </ul>
LOG RAWIMUSXB ONNEW	OEM6/OEM7	Rover Only	<ul style="list-style-type: none"> <li>Raw gyroscope and accelerometer measurements, including an IMU status indicator.</li> <li><b>Required for:</b> IMR file creation and INS data processing; provides sequential changes in velocity and rotation.</li> <li><b>Directions:</b> Must log ONNEW. Use the extended header to include the name of the IMU. This helps to ensure correct conversion in Waypoint products.</li> <li><b>Alternatives:</b> RAWIMUB, RAWIMUSB, RAWIMUXB</li> </ul>

## Recommended Logs

The following logs are not required for post-processing, but provide information that aids in project setup, data analysis, and troubleshooting. A number of logs specified below are used for extracting real-time trajectories to a Waypoint readable format. Instructions on how to generate these files are provided in [Appendix A](#).

Table 3: Recommended logs

Log	Platform	Receiver Type	Details
LOG VERSIONB ONCE	OEM6/OEM7	Rover/Master	<ul style="list-style-type: none"> <li>Version information for all system components.</li> <li><b>Used for:</b> Keeping record of the system components of the data collection.</li> </ul>
LOG RXCONFIGB ONCE	OEM6/OEM7	Rover/Master	<ul style="list-style-type: none"> <li>Receiver configuration.</li> <li>List of all current command settings.</li> <li><b>Helpful for:</b> Support and troubleshooting.</li> <li><b>Note:</b> Log after the configuration commands are sent.</li> </ul>
LOG RXSTATUSB ONCE	OEM6/OEM7	Rover/Master	<ul style="list-style-type: none"> <li>Receiver status.</li> <li>List of GNSS receiver system status (health) parameters.</li> </ul>

LOG THISANTENNATYPEB ONCE	OEM6/OEM7	Rover	<ul style="list-style-type: none"> <li>• Antenna model used by remote receiver.</li> <li>• Corrects vertical offset between where GNSS observations are observed (the electronic phase center) and the Antenna Reference Point (ARP).</li> <li>• Corrects for any difference between the L1 and L2 electronic phase centers, which can be a factor in the success or failure of ambiguity resolution.</li> <li>• Applies elevation-based corrections to GNSS signal.</li> <li>• <b>Helpful for:</b> Auto filling remote antenna information during project creation.</li> <li>• <b>Requirement:</b> User must first set antenna prior to logging it (e.g., THISANTENNATYPE NOV850).</li> </ul>
LOG INSPVAXB ONTIME 1	OEM6/OEM7	Rover Only	<ul style="list-style-type: none"> <li>• INS position, velocity and attitude in the SPAN computation frame and their estimated errors.</li> <li>• <b>Used for:</b> Extracting real-time trajectory to a Waypoint readable format.</li> <li>• <b>Note:</b> If high rate INSPVA logs are needed, but bandwidth is a concern, use INSPVASB and INSSTDEVSB as alternatives.</li> </ul>
LOG BESTPOSB ONTIME 1	OEM6/OEM7	Rover Only	<ul style="list-style-type: none"> <li>• Best available combined GNSS and INS solution output at the GNSS phase center.</li> <li>• <b>Used for:</b> Extracting real-time trajectory to a Waypoint readable format, and decoding position estimated by the receiver to the GPB file.</li> </ul>
LOG BESTGNSSPOSB ONTIME 1	OEM6/OEM7	Rover Only	<ul style="list-style-type: none"> <li>• Best available GNSS solution computed without INS.</li> <li>• <b>Used for:</b> Extracting real-time trajectory to a Waypoint readable format.</li> </ul>
LOG TIMEB ONTIME 1	OEM6/OEM7	Rover/Master	<ul style="list-style-type: none"> <li>• Time related information such as receiver clock offset, and UTC time and offset.</li> <li>• <b>Used for:</b> Decoding receiver clock shift to GPB file.</li> </ul>

LOG SETIMUORIENTATIONB ONCHANGED	OEM6 Only	Rover Only	<ul style="list-style-type: none"> <li>Orientation of the IMU frame in the SPAN computation frame. Specifies the IMU axis aligned with gravity.</li> <li><b>Used for:</b> IMU alignment settings.</li> <li><b>Requirement:</b> User must first set values through the SETIMUORIENTATION command.</li> </ul>
LOG IMUTOANTOFFSETSB ONCHANGED	OEM6 Only	Rover Only	<ul style="list-style-type: none"> <li>Lever arm offset from the IMU to the GNSS antenna.</li> <li><b>Used for:</b> IMU alignment settings.</li> <li><b>Requirement:</b> User must first set values through the IMUTOANTOFFSETS command.</li> </ul>
LOG VEHICLEBODYROTATIONB ONCHANGED	OEM6 Only	Rover Only	<ul style="list-style-type: none"> <li>Rotation from the Vehicle frame to the SPAN frame.</li> <li><b>Used for:</b> IMU alignment settings.</li> <li><b>Requirement:</b> User must first set values through the VEHICLEBODYROTATION command.</li> </ul>
LOG INSCONFIGB ONCHANGED	OEM7 Only	Rover Only	<ul style="list-style-type: none"> <li>All IMU configuration parameters required for post-processing or system analysis.</li> <li><b>Used for:</b> IMU alignment settings.</li> <li><b>Requirement:</b> User must first set values using variations of the SETINSTRANSFORMATION and SETINSROTATION commands.</li> </ul>

For the commands specific to your system setup, see [SPAN Documentation](#).

## Supplementary Logs: Common Applications

This section outlines the logs required for integration of application-specific data in Inertial Explorer. Please note that this list contains only the logs required in Inertial Explorer and does not encompass all logs and commands required for the proper set up and real time tracking of these systems. Further information on application-specific setup can be found in the OEM User Manuals.



## Dual Antenna (ALIGN Solution)

Table 4: Dual antenna logs

Log	Platform	Receiver Type	Details
LOG HEADINGB ONNEW	OEM6 Only	Rover Only	<ul style="list-style-type: none"> <li>Angle from true north of the base ALIGN antenna to the rover ALIGN antenna (positive clockwise direction).</li> <li><b>Used for:</b> HMR file creation.</li> <li><b>Requirement:</b> User must first set the two lever arm values using SETIMUTOANTOFFSET, SETIMUTOANTOFFSET2</li> </ul>
LOG HEADING2B ONNEW	OEM7 Only	Rover Only	<ul style="list-style-type: none"> <li>Angle from true north of the base ALIGN antenna to the rover ALIGN antenna (positive clockwise direction).</li> <li><b>Used for:</b> HMR file creation.</li> <li><b>Requirement:</b> User must first set the two lever arm values using SETINSTRANSALATION ANT1, SETINSTRANSALATION ANT2</li> </ul>
LOG RANGECMP_1B	OEM6/OEM7	Rover Only	<ul style="list-style-type: none"> <li>Satellite range information for the secondary GNSS antenna.</li> <li><b>Required for:</b> GPB file creation for the secondary antenna. This is not required in the default workflow but can be useful for troubleshooting and computing the moving baseline vector in GrafNav software.</li> <li><b>Alternative:</b> RANGE_1B</li> </ul>

## Wheel Sensor (Distance Measurement Instrument – DMI)

Table 5: Wheel sensor logs

Log	Platform	Receiver Type	Details
LOG TIMEDWHEELDATAB ONNEW	OEM6/OEM7	Rover Only	<ul style="list-style-type: none"> <li>Time stamped wheel sensor data.</li> <li><b>Used for:</b> Ticks per revolution in the DMR file.</li> <li><b>Note:</b> Only available on firmware versions older than 7.07.00.</li> </ul>
LOG SETWHEELPARAMETERSB ONCHANGED	OEM6/OEM7	Rover Only	<ul style="list-style-type: none"> <li>Wheel sensor parameters.</li> <li><b>Used for:</b> Sensor parameters in the DMR file header.</li> <li><b>Requirement:</b> User must first set the number of ticks per revolution, wheel circumference, and the resolution of the wheel sensor in the SETWHEELPARAMETERS command.</li> <li><b>Notes:</b> <ul style="list-style-type: none"> <li>Only available on firmware versions older than 7.07.00.</li> <li>These DMI parameters can also be set in the Global Options window of the Convert Raw GNSS data to GPB utility.</li> </ul> </li> </ul>
LOG RAWDMIB ONNEW	OEM7 Only	Rover Only	<ul style="list-style-type: none"> <li>Time stamped raw wheel sensor data.</li> <li><b>Used for:</b> Measurements in the DMR file.</li> <li><b>Note:</b> Available on firmware versions 7.07.00 and newer.</li> </ul>
LOG DMICONFIGB ONCHANGED	OEM7 Only	Rover Only	<ul style="list-style-type: none"> <li>Wheel sensor configuration.</li> <li><b>Used for:</b> Setting the ID, availability, and input type of DMI sensor(s).</li> <li><b>Requirement:</b> User must first set these parameters before logging data from wheel sensor(s).</li> <li><b>Notes:</b> <ul style="list-style-type: none"> <li>Available on firmware versions 7.07.00 and newer.</li> <li>A maximum of 3 DMIs can be decoded to the DMR file, but Inertial Explorer will only process data from the first wheel sensor that is logging cumulative ticks.</li> </ul> </li> </ul>

No RAWDMIB logs will be decoded without the presence of a DMICONFIGB log. As such, users may consider logging this ONTIME at a coarse rate to ensure it is saved to file (e.g. LOG DMICONFIGB ONTIME 300).

## Miscellaneous

Table 6: Miscellaneous logs

Log	Platform	Receiver Type	Details
LOG MARKTIMEB ONNEW	OEM6/OEM7	Rover Only	<ul style="list-style-type: none"> <li>Time of mark input event.</li> <li><b>Used for:</b> Measure the time when events are occurring in other devices.</li> <li><b>Note:</b> Other mark input event logs include MARK2TIMEB, MARK3TIMEB, and MARK4TIMEB</li> </ul>

## Appendix A: Full Project Example

This section provides an example of how a well-planned list of logs and commands will allow for an efficient workflow in Inertial Explorer. The following SPAN data collection uses GPS and GLONASS constellations, a dual antenna system, and set up with the default IMU orientation (standard Y forward, Z up, X right). The equivalent OEM6 and OEM7 logs and commands used in this data collection are listed below to provide a summary example. The figures on the following pages demonstrate how the information from these logs is used in Inertial Explorer to convert and generate files, and auto-fill set up parameters for the project.

### Logs and Commands

#### OEM6

```
CONNECTIMU COM2 IMU_ADIS16488
SETIMUTOANTOFFSET -0.976 -1.661 1.551 0.03
0.03 0.03
SETIMUTOANTOFFSET2 -1.021 0.890 1.567 0.03
0.03 0.03
VEHICLEBODYROTATION 0 0 0
SETIMUORIENTATION 5
THISANTENNATYPE NOV702
LOG VERSIONB ONCE
LOG RXCONFIGB ONCE
LOG RXSTATUSB ONCE
LOG THISANTENNATYPEB ONCE
LOG HEADINGB ONNEW
LOG VEHICLEBODYROTATIONB ONCHANGED
LOG SETIMUORIENTATIONB ONCHANGED
LOG IMUTOANTOFFSETS ONCHANGED
LOG RANGECPMB ONTIME 1
LOG RANGECPMB_1B ONTIME 1
LOG GPSEPHEMB ONNEW
LOG GLOEPHEMERISB ONNEW
LOG GALINAVEPHEMERISB ONNEW
LOG GALFNAVEPHEMERISB ONNEW
LOG BDSEPHEMERISB ONNEW
LOG QZSEPHEMERISB ONNEW
LOG RAWIMUSXB ONNEW
LOG TIMEB ONTIME 1
LOG BESTPOSB ONTIME 1
LOG BESTGNSSPOSB ONTIME 1
LOG INSPVAXB ONTIME 1
LOG INSUPDATEB ONCHANGED
```

#### OEM7

```
CONNECTIMU COM2 IMU_ADIS16488
SETINSTRANSATION ANT1 -0.976 -1.661 1.551
0.03 0.03 0.03
SETINSTRANSATION ANT2 -1.021 0.890 1.567
0.03 0.03 0.03
SETINSROTATION RBV 0 0 0
THISANTENNATYPE NOV850

LOG VERSIONB ONCE
LOG RXCONFIGB ONCE
LOG RXSTATUSB ONCE
LOG THISANTENNATYPEB ONCE
LOG HEADING2B ONNEW
LOG INSCONFIGB ONCHANGED

LOG RANGECPMB ONTIME 1
LOG RANGECPMB_1B ONTIME 1
LOG GPSEPHEMB ONNEW
LOG GLOEPHEMERISB ONNEW
LOG GALINAVEPHEMERISB ONNEW
LOG GALFNAVEPHEMERISB ONNEW
LOG BDSEPHEMERISB ONNEW
LOG QZSEPHEMERISB ONNEW
LOG RAWIMUSXB ONNEW
LOG TIMEB ONTIME 1
LOG BESTPOSB ONTIME 1
LOG BESTGNSSPOSB ONTIME 1
LOG INSPVAXB ONTIME 1
LOG INSUPDATESTATUSB ONCHANGED
```

## Data Conversion

Data conversion can be done with Convert Raw GNSS data to GPB Utility. Use the **Get Folder** button to browse to the folder containing the raw GNSS data, and then use the **Auto Add All** feature to add all raw GNSS data, including NovAtel data, for conversion. **Auto Add All** searches for any supported GNSS manufacturer data within the current folder. **Auto Add Recursively** searches the current folder and all sub-folders.

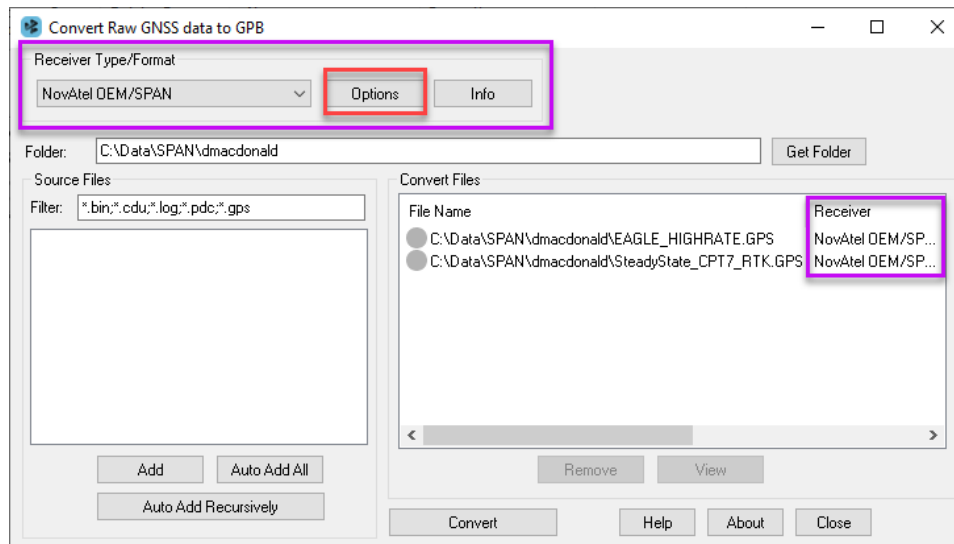


Figure 1: GNSS Raw Data Converter Utility – Auto-detect the NovAtel OEM7/SPAN receiver type

Several logs, specified in the [Recommended Logs](#) list, are used to generate real time trajectory files during data conversion. After the raw data file is added, click the **Options** button, and select the **Create trajectory files for supported records** option. After the data has been converted, the trajectory files can be loaded and viewed in Inertial Explorer, to compare against the post-processed solutions.

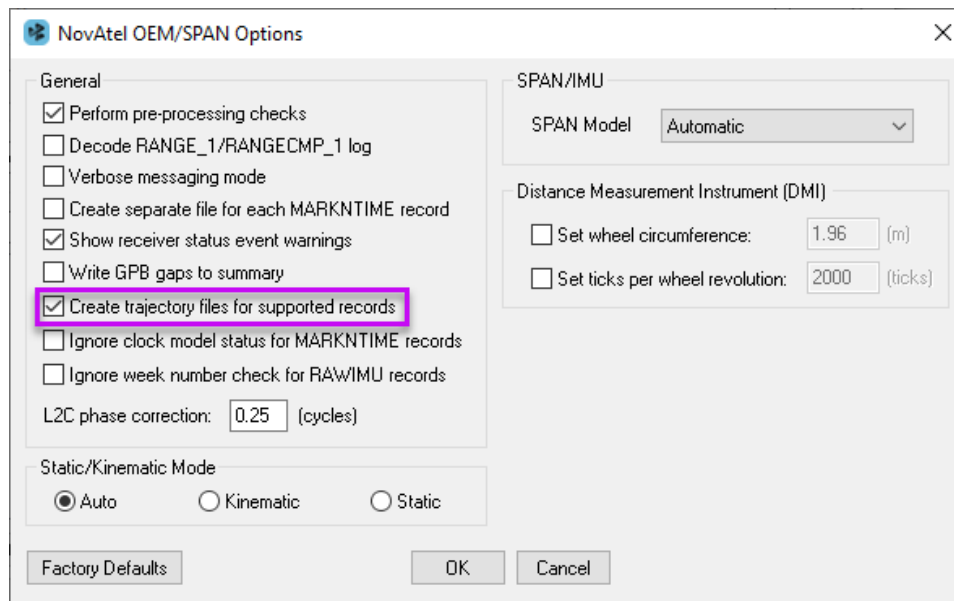


Figure 2: GNSS Raw Data Converter Utility - Generate real time trajectory files during data conversion

## Data Files

Depending on the type of data logged, several file types will be generated and saved in the same directory as the original raw data file. As shown in [Figure 3](#), the data used in this example generated the \*.epp, \*.gpb, \*.hmr, \*.imr, \*.sta and real time trajectory files (\*.fp and \*.ft). [Table 7](#) lists all the files which can be produced upon data conversion; not all data sets will contain the relevant data to produce all these files. When the GPB file is loaded into the project as a Rover or Master, the other file types are also added.

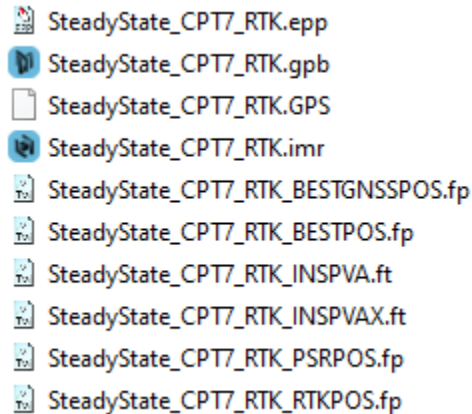


Figure 3: Files generated after raw data conversion of this example data set

Table 7: All possible file types generated from data conversion

File Type	Type of Data
DMR	DMI data
EPP	GNSS ephemeris records
FP, FT	Real-time trajectory files
GPB	Raw GNSS data
HMR	Heading data
IMR	IMU data
MMR	Mount data
STA	Camera marks, antenna profile, station names

## Auto-fill Set Up Parameters

With this data logged, converted, and added to the project, users can then auto-fill a variety of parameters in the Processing Settings. The following figures show the parameters filled using the logs recorded in the example data collection.

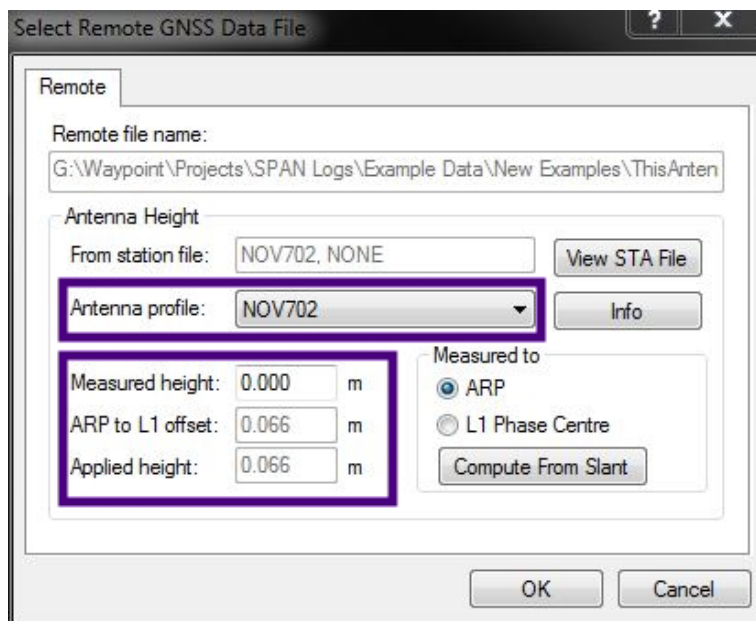


Figure 4: When adding a remote or base station file, the Antenna Profile will be auto filled using information from the THISANTENNATYPEB log, read in from the STA file

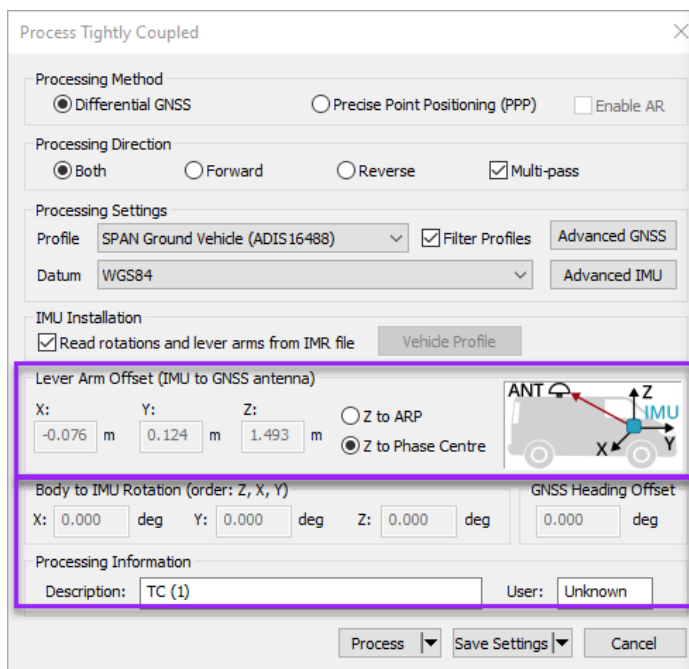


Figure 5: The Lever Arm and IMU rotation will be auto-filled from the IMR files

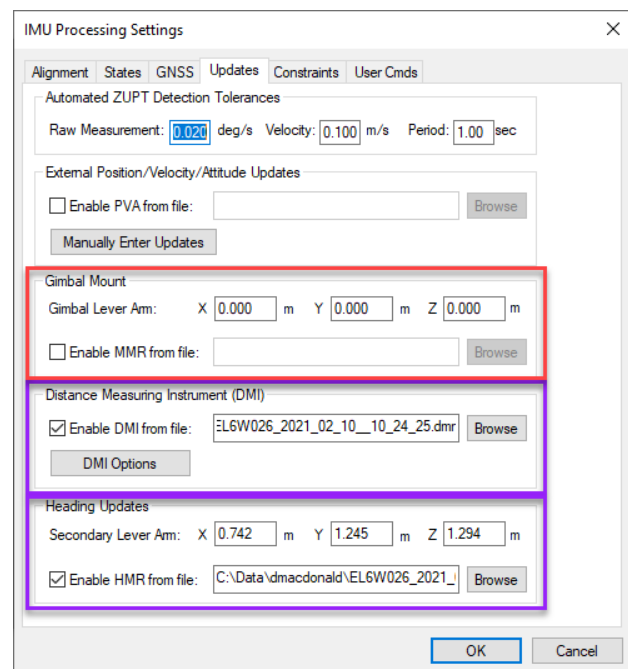


Figure 6: Dual antenna heading, odometer and/or mount data are auto filled from the converted HMR, DMR and MMR files



## Additional Resources

### OEM User Manuals

Further details on the logs and commands outlined in this document can be found in the NovAtel OEM User Manuals:

- [SPAN on OEM6 Firmware Reference Manual](#)
- [OEM6 Family Firmware Reference Manual](#)
- [OEM7 Receiver Documentation Portal](#)

### Waypoint Product Manuals

Detailed instructions on using Inertial Explorer can be found in the [Waypoint User Documentation Portal](#).



## Support

To help answer questions and/or diagnose any technical issues that may occur, the [NovAtel Support website](#) is a first resource.

Remaining questions or issues, including requests for test subscriptions or activation resends, can be directed to [NovAtel Support](#).

Before contacting Support, it is helpful to collect data from the receiver to help investigate and diagnose any performance-related issues. A list of appropriate troubleshooting logs can be found on the [OEM7 Documentation Portal](#) (the LOG command with the recommended trigger and data rate is included with each log).

The data can also be collected using [NovAtel Application Suite](#).

## Documentation

For any questions on logs and commands, please visit the [OEM7 Documentation Portal](#).

## Contact Hexagon | NovAtel

[support.novatel@hexagon.com](mailto:support.novatel@hexagon.com) 1-800-NOVATEL (U.S. and Canada) or 1-403-295-4900  
For more contact information, please visit [novatel.com/contact-us](https://novatel.com/contact-us)